

Snacking Bar Mould Grips for MA1920 ONLY


Step 1

To ensure the grips will stick, clean the surface with alcohol, then lightly score the mould where the grips will be located with a sharp Stanley knife in a hatch pattern, 2 or 3 lines in each of two directions is fine, score on **BOTH** sides of the ridge:




Step 2

Put on a latex glove (optional), place a single drop of Super Glue Gel on the hatch mark **on each side** of the ridge where the grip will be located:

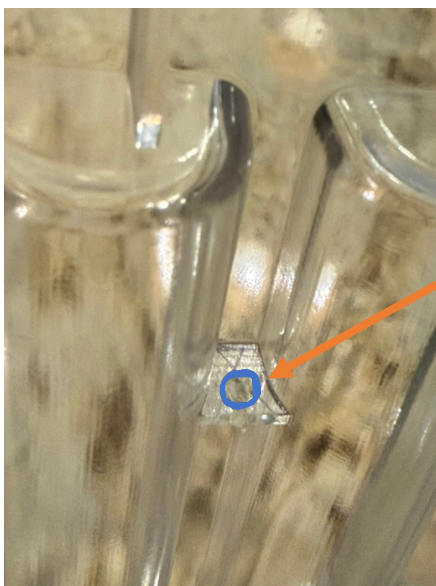

Step 3

Check the orientation of the grip, slide it onto the ridge and push firmly, keep firm pressure on the grip, pushing it onto the supporting ridge, after about 20-30seconds the glue should have begun to set.

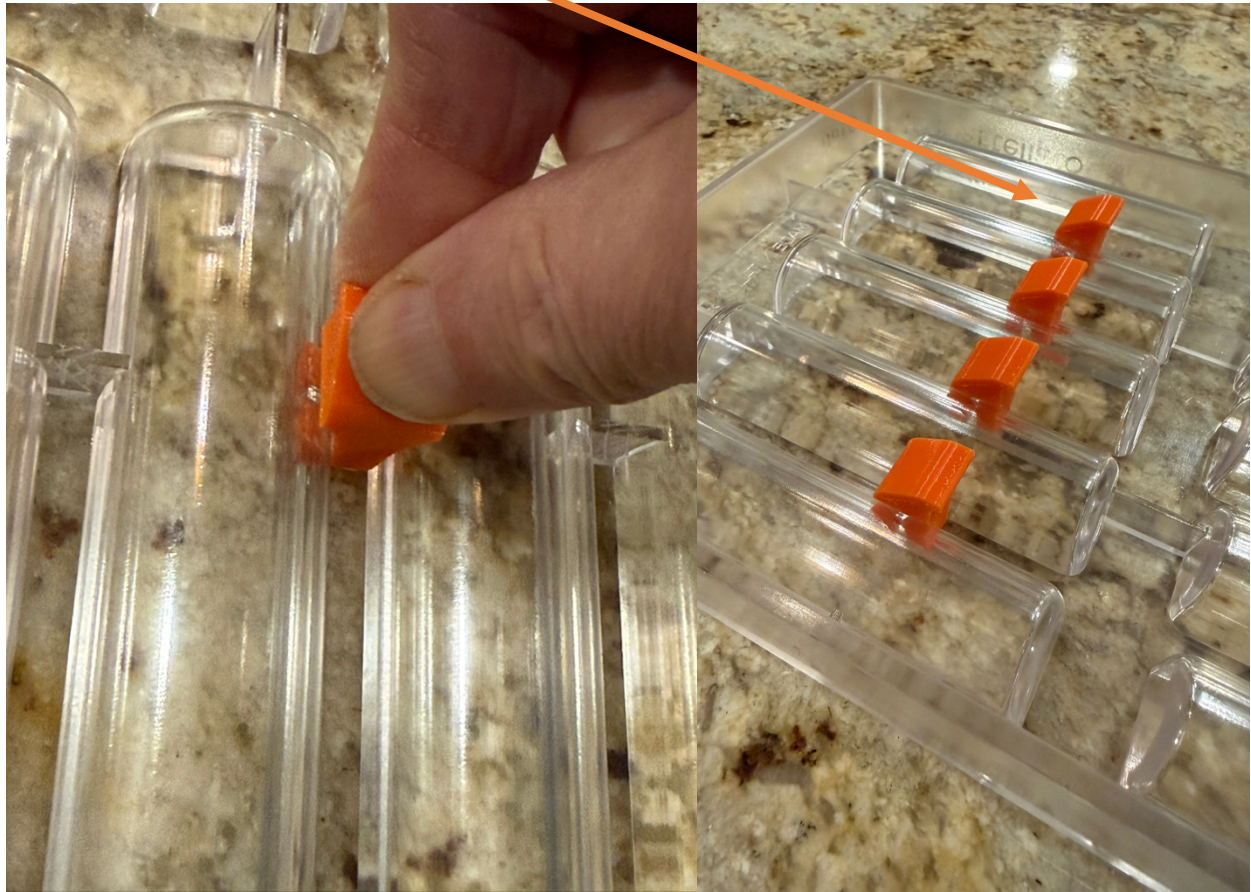

Repeat for remaining grips.

Let the glue fully cure for **24 hours**, then enjoy!!

Any feedback or problems, please email me: mrzardos@gmail.com

Website : mrzardos.com